



Read Before Using

OUTDOOR FRIDGE

PART NO. VG-R32FRG



Intertek
5029340

CONFORMS TO UL 60335-1/2-24
CERTIFIED TO CSA C22.2#60335-1/2-24



OWNERS MANUAL

TABLE OF CONTENT

IMPORTANT SAFETY GUIDES 2 - 6

Danger
Warning

INSTALLATION AND OPERATION 7 - 9

Installing Your Unit
Before Using Your Unit
Electrical Connection
Temperature Control Board Instructions
Food Storage

CARE & MAINTENANCE 10 - 11

Operating Your Unit
Cleaning Your Unit
Power Failure
Vacation Time
Moving Your Unit

TROUBLE SHOOTING GUIDES 12 - 13

TECHNICAL DATA AND WIRING DIAGRAM 14 - 15

PACKING LIST

NO.	Description	Quantity
1	Refrigerator	1
2	User's Manual	1
3	Hardware Pack	1



IMPORTANT SAFE GUIDES

To reduce the risk of fire, electrical shock or injury when using the Refrigerator, follow basic precaution, including the following:

Remove all packages before using this unit.

DANGER

- ◆ Plug into a grounded 3-prong outlet, do not remove grounding prong. Do not use an Adapter. And do not use an extension cord.
- ◆ It is recommended that a separate circuit, serving only your refrigerator be provided. Use Receptacles that cannot be turned off by a switch or pull chain.
- ◆ Never clean refrigerator parts with flammable fluids. These fumes can create a fire hazard or Explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- ◆ Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- ◆ Do not connect or disconnect the electric plug when your hands are wet.
- ◆ Unplug the refrigerator or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- ◆ Do not attempt to repair or replace any part of your refrigerator unless it is specifically recommended in manual. All other servicing should be referred to a qualified technician.

WARNING

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means of accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, Unless they are of the type recommended by the manufacturer.

- ◆ Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- ◆ This appliance is intended to be used in household and similar applications such as:
 - ◇ Staff kitchen areas in shops, offices and other working environments;
 - ◇ Farm houses and by clients in hotels, motels and other residential type environments;
 - ◇ Bed and breakfast type environments;
 - ◇ Catering and similar non-retail applications.

WARNING

Warning: Risk of fire / flammable materials, taking care to avoid causing a fire by igniting flammable material.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the noncompliance to prevent mold developing withing the appliance.

- ◆ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ◆ Children aged from 3 to 8 years are not allowed to load and unload refrigerating appliances.
- ◆ To avoid contamination of food, please respect the following instructions:
 - ◇ Opening of the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - ◇ Clean regularly surfaces that can come in contact with food and accessories drainage systems.
 - ◇ Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - ◇ Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes.
 - ◇ One-, Two- and three-star compartments are not suitable for the freezing of fresh food.
 - ◇ If the refrigerating appliances is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mold developing withing the appliance.

 
FOLLOW WARNING CALL OUTS ONLY WHEN APPLICABLE TO YOUR MODEL

- ◆ Need 2 or more people to move and install refrigerator. Failure to do so can result in back or other injury.
- ◆ To ensure proper ventilation for your refrigerator, the front of the unit must be completely Unobstructed. Use the appliance in a well-ventilated area with temperatures above 40°F (5°C) and below 105°F (40°C). This unit should be installed in an area protected from the direct elements.
- ◆ The refrigerator should not be located directly next to other sources of high heat.
- ◆ The refrigerator must be installed with all electrical connections in accordance with local codes. A standard electrical supply (110V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances is required.
- ◆ Do not kink or pinch the power supply cord of refrigerator.
- ◆ The fuse (or circuit breaker) size should be 15 Amps.
- ◆ **It is important for the refrigerator to be leveled in order to work properly. You may need to make Adjustments to LEVEL it.**
- ◆ Never allow children to operate, play with or crawl inside the refrigerator.
- ◆ Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- ◆ Do not use this apparatus for other than its intended purpose.
- ◆ Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- ◆ Do not use this apparatus for other than its intended purpose.

PAY ATTENTION TO

DISPOSABLE OF THE PRODUCT


This marking indicates that this product should not be disposed with other household wastes throughout the U.S. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

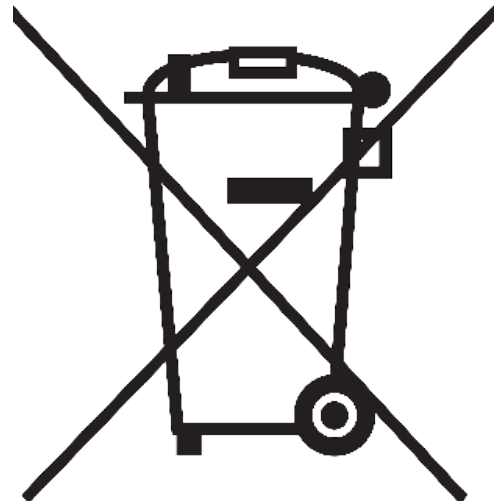

FOOD STORAGE

- ◆ Before using the cabinet for the first time, set the control knob and allow the unit to run continuously for 4 hours. After this initial run, adjust the knob back to the factory-recommended setting for normal operation.
- ◆ Ensure there is adequate space between stored items and between the food and the interior walls of the cabinet. This allows for proper air circulation and even cooling. Avoid placing bottled or canned beverages with a freezing point above the cabinet's temperature inside when the unit is operating below 0°C (32°F), as they may burst.
- ◆ For foods prone to moisture loss or those that should remain dry, wrap them in airtight food storage bags or fresh-keeping film before placing them in the cabinet. This helps prevent odor transfer and minimizes frost buildup.
- ◆ Do not store volatile or flammable gases and liquids—such as gasoline, strong acids, or strong Alkali—in the cabinet. These substances pose a serious safety hazard.

 INSTALLATION AND OPERATION

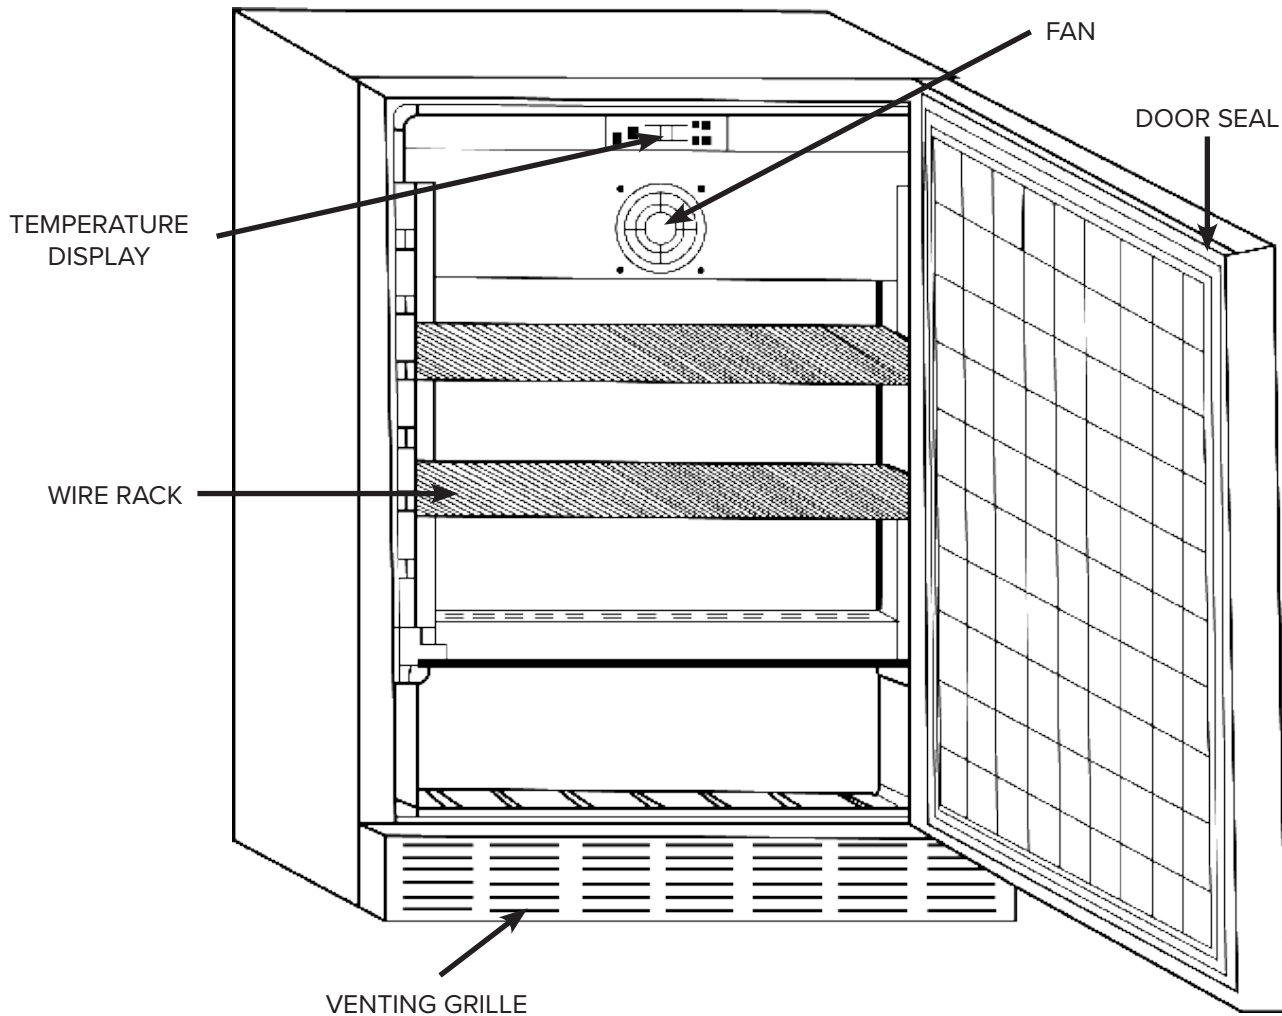

INSTALLING YOUR UNIT

- ◆ This unit is front vented, so the front bottom vent must remain unobstructed to operate correctly
- ◆ Make sure the refrigerator is empty.
- ◆ Place your unit on a floor that is strong enough to support the unit when it is fully loaded. To level your unit, adjust the leveling legs at the bottom of the unit.
- ◆ Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct Sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- ◆ Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Products service center.
- ◆ After plugging the appliance into a wall outlet, allow the unit to cool down for 2-3 hours before placing food in the refrigerator compartment.

BEFORE USING YOUR UNIT

- ◆ Remove the exterior and interior packaging material.
- ◆ Check and make sure if all parts are available per pack list.
- ◆ Before connecting the unit to the power source, let it stand upright for approximately 2 hours.
- ◆ This will reduce the possibility of a malfunction in the cooling system caused during transportation.
- ◆ Clean the interior surface with lukewarm water using a soft cloth.

ELECTRICAL CONNECTION

 
If the unit is unplugged or is turned off, you must wait 3 to 5 minutes to restart it. If you attempt to Restart immediately, the unit will not start right away

FOOD STORAGE

- ◆ Use plastic wrap to keep food and place evenly on wire rack or drawer.
- ◆ Let hot food cool down before put into this refrigerator for energy saving.
- ◆ Don't open door or drawer too frequently.
- ◆ Keep gap between foods inside refrigerator.
- ◆ Keep food dry before storage.

TEMPERATURE CONTROL BOARD INSTRUCTIONS

Your unit has only one control for regulating the temperature in the compartment. The control board is located at the front upper area of the compartment.

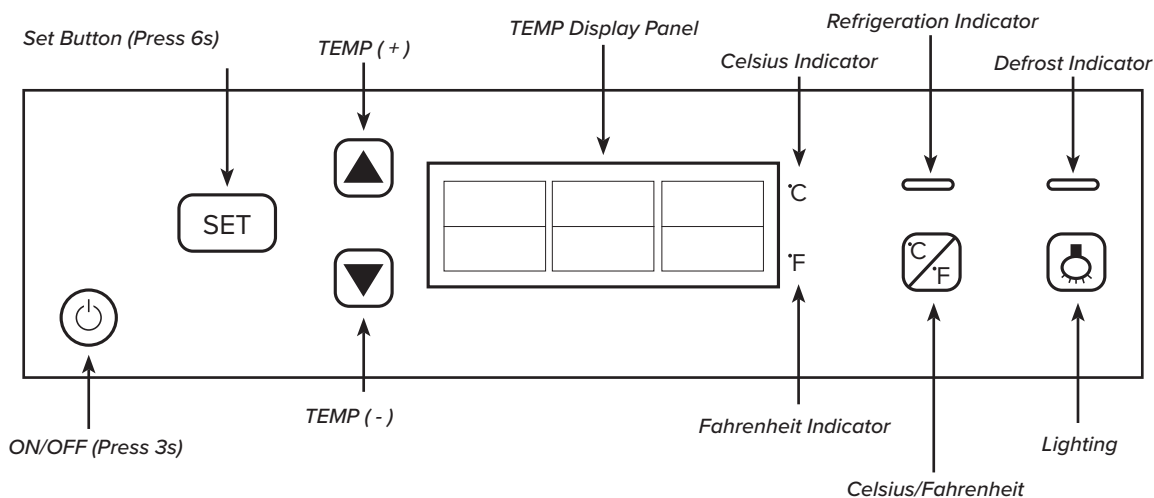

CONTROL BOARD OPERATION INSTRUCTIONS:

- 1. Initial Power On:** Ensure the power cord is connected. The compressor starts with a protective delay, and the cooling light flashes. After a delay of 2 minutes or by pressing the key,  the compressor starts cooling.
- 2. Temperature Control Adjustment:** Press the “SET” key, the control temperature is displayed flashing. By pressing the  or  key, you can adjust the set temperature high and low values. Press the “SET” key again to exit the adjustment state, displaying the refrigerator temperature (Temperature adjustment range: -1°C/30°F to 8°C/46°F).
- 3. Parameter Settings:** Press the “SET” key for 6 seconds to enter the parameter settings display. Press the  or  key again to choose the adjustment of each parameter value. The sequentially displayed adjustable Parameters are L1, L2, L3, L4, L5, L6, F1, F2, F6. It is recommended that this be set by a professional.
- 4. Reset to Factory Settings:** Press and hold the   key for 6 seconds. The display will flash “888”, indicating that all parameter and control temperature values have been reset to factory settings. The system will Automatically return to normal operation mode after 6 seconds.
- 5. Power On and Off:** Hold the  key for 3 seconds to turn off the cooling mode and the temperature display. The temperature display will show “— — —”, stopping all control output. Press the  key for 1 second to display the refrigerator temperature, and the cooling mode will restart after a delay.
- 6. Abnormal Working Mode:** When the refrigerator temperature probe is short-circuited or exceeds the Maximum temperature (100°C/212°F), it displays “EIH”. When the refrigerator temperature probe is Open-circuited or the temperature is below the lower limit (-50°C/-58°F), it displays “EIL”. At this time, the Refrigerator enters a timed working mode, the compressor stops for 15 minutes and operates for 30 minutes.

CARE AND MAINTENANCE

CAUTION

Do not use boiling water because it may damage the plastic parts. In addition, never use a sharp or metallic instrument to remove frost as it may damage the cooling system and will void the warranty. We recommend using a plastic scraper.

CAUTION

Failure to unplug the unit could result in electrical shock or personal injury.

OPERATING YOUR UNIT

Your unit has only one control for regulating the temperature in the compartment. The temperature Control is located on top side of the compartment.

CLEANING YOUR UNIT

- ◆ Turn the temperature control to “OFF”, unplug the unit, and remove the food, shelf, and tray.
- ◆ Wash the inside surfaces with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- ◆ Wash the shelf and tray with a mild detergent solution.
- ◆ The outside of the unit should be cleaned with mild detergent and warm water.
- ◆ Leave excess water out of the sponge or cloth before cleaning the area of the controls, or any electrical parts.
- ◆ Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your unit if you minimize the number of times the door is opened. If the power is going to be off for a longer Period of time, you need to take the proper steps to protect your food.

VACATION TIME

- ◆ **Short vacations:** Leave the unit operating during vacations of less than three weeks.
- ◆ **Long vacations:** If the appliance will not be used for several months, remove all food and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

MOVING YOUR UNIT

- ◆ Remove all the food.
- ◆ Securely tape down all loose items inside your unit.
- ◆ Turn the leveling legs up to the base to avoid damage.
- ◆ Tape the door shut.
- ◆ Be sure the unit stays secure in the upright position during transportation. Also protect the outside of unit with a blanket, or similar item

TROUBLE SHOOTING GUIDE

Users can solve many common issues easily, saving you the cost of a service call.
Try the suggestions below before calling the service.


PROBLEM	POSSIBLE CAUSE
Unit does not operate.	<ul style="list-style-type: none">• Power cord is not plugged in.• Circuit breaker has tripped or a fuse is blown.• Temperature control is set to “OFF.”
Turns on and off frequently.	<ul style="list-style-type: none">• Surrounding (ambient) temperature is higher than normal.• A large amount of food was recently added.• Door is being opened too frequently.• Door is not fully closed.• Temperature setting is incorrect.• Door gasket is not sealing properly.
Vibrations	The unit is not level. Check and adjust leveling if necessary.
Unit Is Noisy	<ul style="list-style-type: none">• Normal sounds from refrigerant flow may cause a rattling noise.• Gurgling sounds at the end of a cooling cycle are normal.• Popping or crackling sounds may result from contraction and expansion of the unit’s interior walls.• The unit is not level.
The door cannot close properly.	<ul style="list-style-type: none">• The unit is not level.• Door may not have been reinstalled properly after reversal.• Door gasket is dirty, damaged, or misaligned.• Shelves, bins, or baskets are not correctly positioned and may obstruct closure.

ENERGY SAVING TIPS

- ◆ Let hot foods cool to room temperature before placing in the unit. Overloading the unit forces the compressor to run longer
- ◆ Be sure to Wrap foods properly and wipe containers dry before placing them in the unit. This cuts down on frost build-up inside the unit.
- ◆ Unit Storage bin should not be lined with aluminum foil wax Paper or Paper toweling Liners interfere with cold air circulation, making the unit less efficient.
- ◆ Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.
- ◆ Safety Clearance

BACK	$\geq 7.8''$
LEFT	$\geq 4''$
RIGHT	$\geq 4''$
TOP	$\geq 4''$

 Technical Data and Wiring Diagram

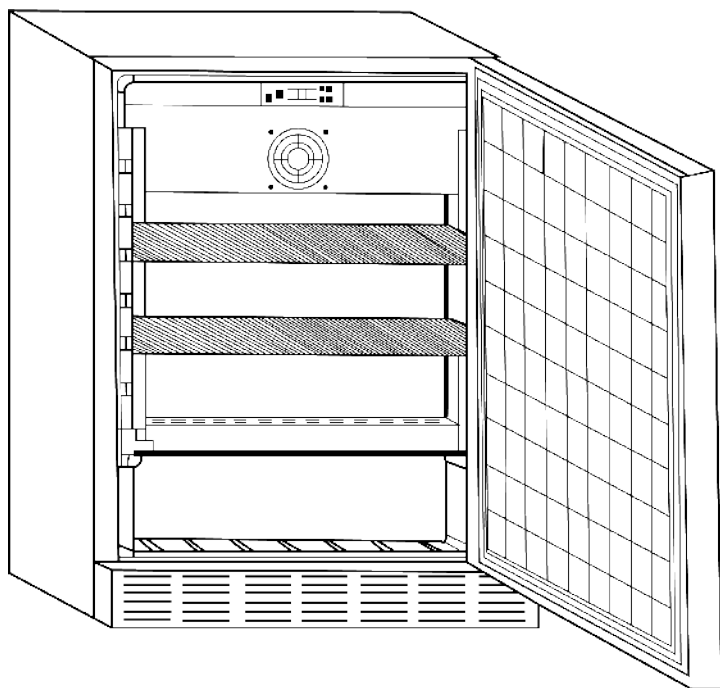

Voltage:	AC110
Frequency:	60Hz
Current:	0.85 Amps
Refrigerant Type:	R600a
Insulation Blowing Gas	C ₅ H ₁₀
Climate Class:	N



CONFORMS TO UL 60335-1/2-24
CERTIFIED TO CSA C22.2#60335-1/2-24

 


IMPORTANT: FOR OUTDOOR AND INDOOR USE

WARNING

Risk of Electric Shock. Disconnect Power Before Maintenance.
Do Not Operate Unit with Back Panel Open.
Operating this Unit between 10C and 40C Ambient Temperature.

CIRCUIT DIAGRAM

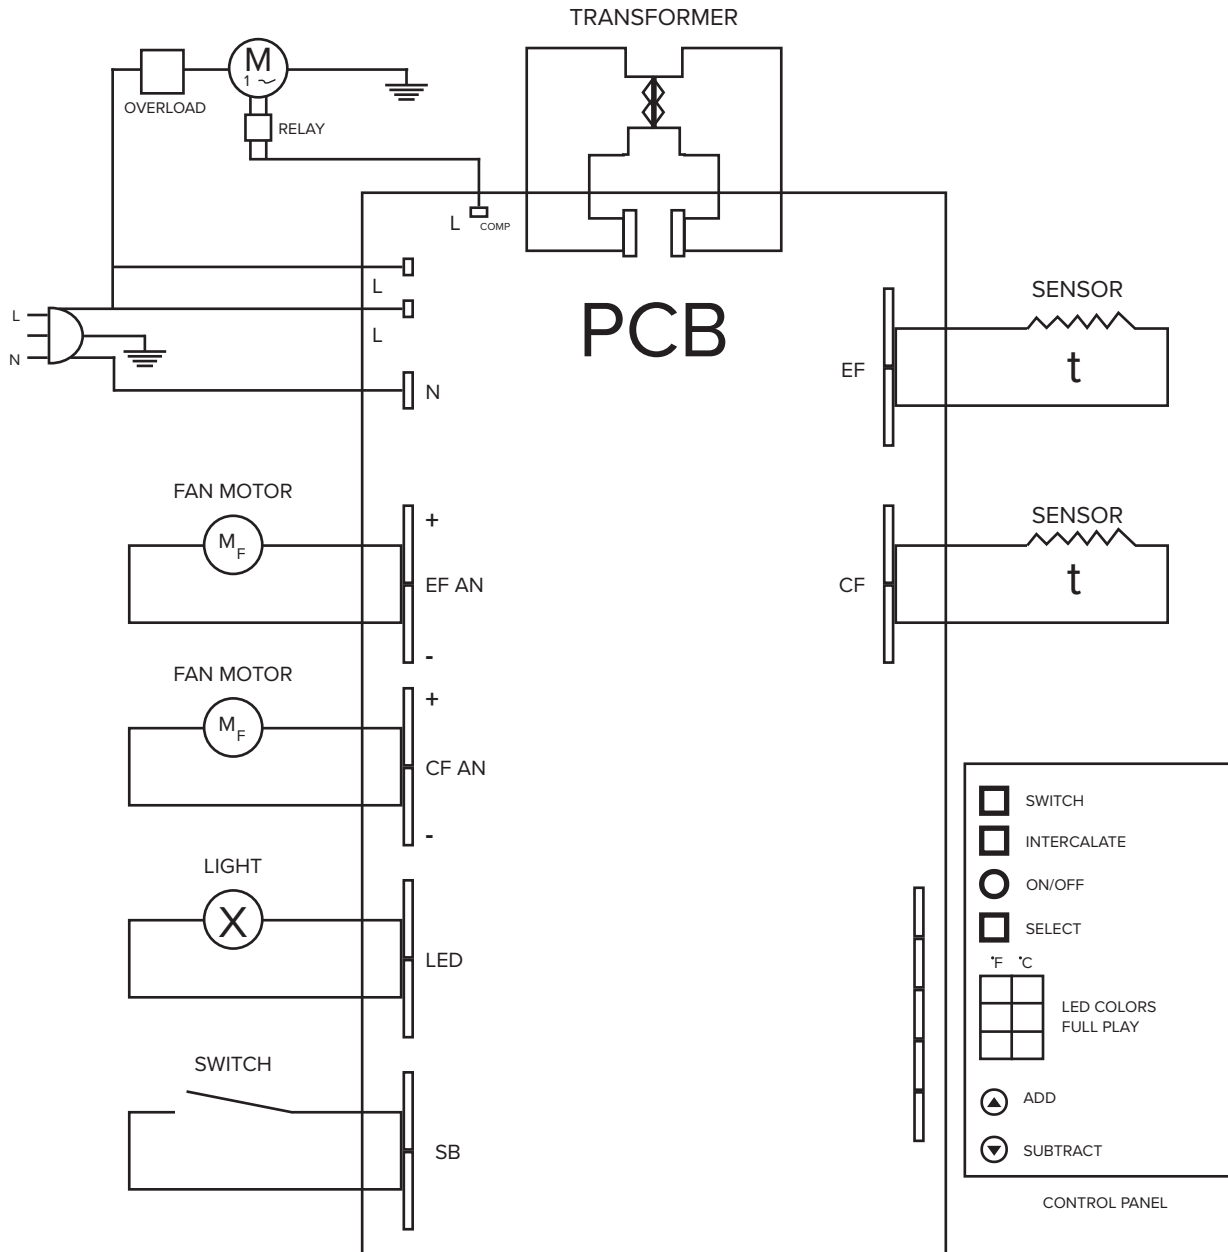

IMPORTANT: This wiring diagram is for reference purposes only. Please refer to the wiring label located on the back of the refrigerator for the most accurate and up-to-date information.



Outdoor Rated Fridge Limited Warranty

Videl USA stands behind the quality and craftsmanship of every product. Videl USA warrants this Outdoor Rated Refrigerator ("Product") to the original purchaser against defects in material and workmanship under normal residential outdoor use, subject to the terms below.

Warranty Coverage by Product Type

Product	Model No.	Warranty Period
Outdoor Rated Fridge	VG-R32FRG	1 Year

What this Warranty Covers	What is Not Covered
<ul style="list-style-type: none">Compressor / Motor: defects in material or workmanshipFans: cooling and ventilation componentsInterior Lighting: factory-installed fixtures and components	<ul style="list-style-type: none">User error, misuse, abuse, or neglectImproper installation or ventilation clearanceNormal wear and tear, cosmetic damageWeather events, flooding, fire, pestsUnauthorized repairs or non-approved partsShipping/transport damage after deliveryCommercial or non-residential useIncidental or consequential damagesRoutine maintenance (gaskets, filters, cleaning)

Claim Requirements

- Proof of purchase showing the original purchase date
- Product model and serial number
- Photos or description of the defect, if requested
- Claims must be submitted to Company or an authorized dealer within the warranty period

How to File a Warranty Claim

To submit a warranty claim, contact your authorized Videl USA retailer or reach out to our customer service team directly with your proof of purchase, product model, and a description and photos of the issue. Claims will be reviewed to confirm eligibility under the terms above.

Videl USA reserves the right to determine, at its sole discretion, whether a claim qualifies as a covered manufacturer defect. This warranty applies to the original purchaser and is non-transferable unless otherwise stated.

Contact Us

Email: support@videlusa.com

Phone: (909) 460-5579

VIDELTM
— U S A —